
BLICK art materials


TRIPOD FLOOR EASEL

assembly instructions For models 50620-2050 & 50620-8550


PARTS

HARDWARE

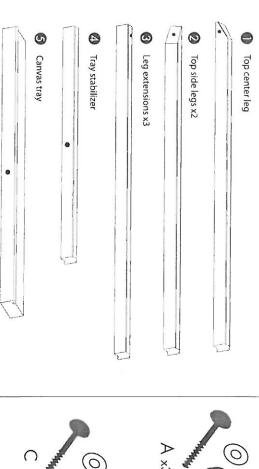


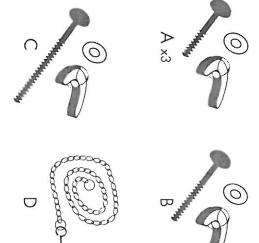



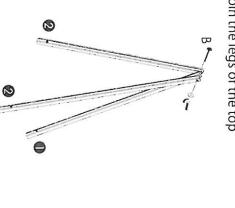


STEP 2 Attach the leg extensions

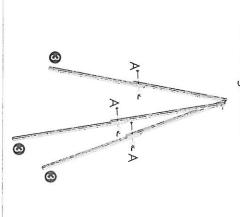


STEP 3 Attach tray,

chain and tray stabilizer

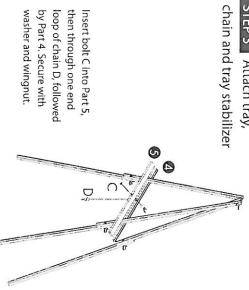

STEP 4 Secure chain to center leg with small

eyelet screw

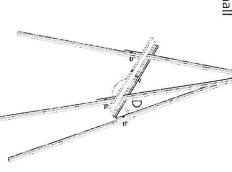

DICKBLICK.COM

washer and wingnut.