

the CAROUSEL

FOUNTAIN PEN

Capturing your most magical memory of the midway, The Carousel is a joyous writing instrument that combines tactility and nostalgia in a lightweight body to create a charming experience with every single detail.

The all new custom-ground steel nib is playful and agile, able to produce beautifully nuanced lines with its subtle flexibility. Available in both fine and medium weights, it is laser-etched with a galloping horse that dances to your every word.



the ROUNDABOUT

ROLLERBALL PEN

Indulge in a wondrous creative experience that transports you back to the age of innocence when you first put pen to paper. Designed with new users in mind, The Roundabout rollerball pen unites the convenience and accessibility of a ballpoint with the customizability of using fountain pen inks. Explore every colour in our universe with the Roundabout.



CARE INSTRUCTIONS

- To refill your pen, simply unscrew the barrel, submerge the entire nib or rollerball tip into the ink bottle (nib facing downwards), and slowly twist the converter to draw the ink into the reservoir. It is normal to get a few air bubbles.
- To clean your nib, unscrew the grip and remove the converter from the barrel, then rinse with cold water until the water runs completely clear.
- If your pen has not been used for longer periods of time, you may need to soak the grip in water for 24 hours. Next, set the feeder down on a clean paper towel until ink no longer bleeds out. Once cleaned and thoroughly dry, the nib/tip is ready to be used again.

