

# HOW TO REFILL

## A MONTANA ACRYLIC EMPTY MARKER



1.

To Refill an ACRYLIC Marker, unscrew the nib housing to the left to remove it



2.

Remove the valve system. Use your finger nail to remove it



3.

Once the valve system is removed the marker is ready to refill



4.

Use a 25ml or 180ml ACRYLIC color of your choice and slowly pour the paint into the body of the marker



5.

Fill the marker body to three quarters full maximum. This ensures enough room left to refit the valve system




6.

Put the valve system back on the marker and press it tight




7.

Screw the nib housing back on to the right until it is tight

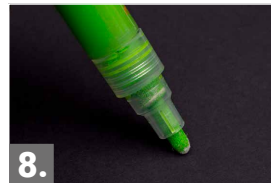

8.

Shake well. Now put the nib down on a surface and slowly pump the nib up and down until the paint starts to flow through

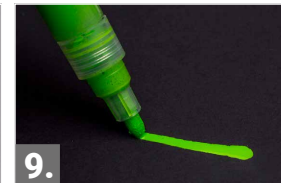

9.

We recommend using on a test surface first. Now enjoy painting!