

ImpressArt®

Stamped Initial Charm



Tools Needed:

- Ergo-Angle Hammer
- Steel Block
- Flat Nose Pliers
- Chain Nose Pliers
- Letter Stamps
- Stamp Enamel Marker
- Polishing Cloth
- Aluminum Circle Tag w/ Ring
- 19 Gauge Jump Ring
- 18 Inch Ball Chain



Step 1

Stamp desired letter on the aluminum blank.


- Place stamping blank on steel block
- If the stamp has an ImpressArt logo, make sure it is facing you to make sure the letter is stamped the right direction
- Hold the letter stamp at a 90 degree angle to the stamping blank
- Strike the stamp once with medium force



Step 2

Highlight letter with stamp enamel.

- Use the Stamp Enamel Marker to completely cover the impression
- Wait 1 – 3 minutes
- Wipe away the excess stamp enamel with a soft cloth

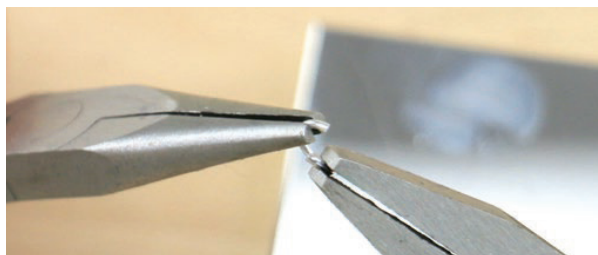

Step 3

Use two pairs of pliers to open the jump ring.


- Place one pair on either side of the opening
- Move the ends past each other



Step 4

Attach the jump ring to the charm.

- Slide one end of the jump ring through the loop of the charm

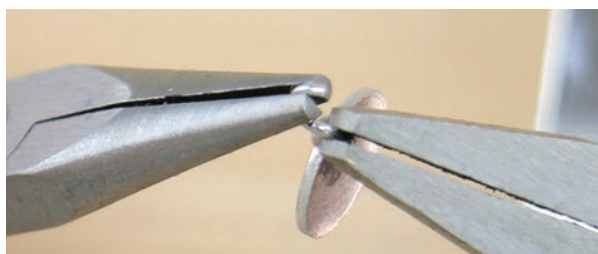

Step 5

Close the jump ring using two pairs of pliers.

- Place one pair on either side of the opening
- Move the ends back to the original position



Step 6

Attach the charm by sliding it onto a chain, bracelet or key ring.